

# COMFORT CORNER 150x150 cm

#### Size (cm) : 150x150 Height (cm) : 60 Weight (kg) : 34 Front Panel Weight (kg) : 6.6 Side Panel Weight (kg) : -Volume (It) : 308 Available massage systems : Duo Maxi Duo Soft






 $VitrA^{\circ}$ 

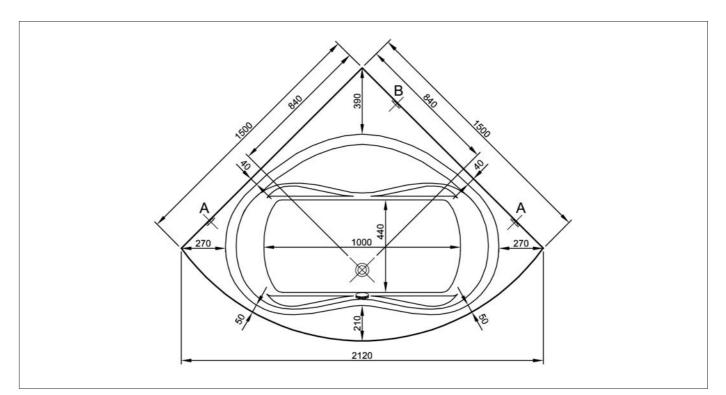

Plan

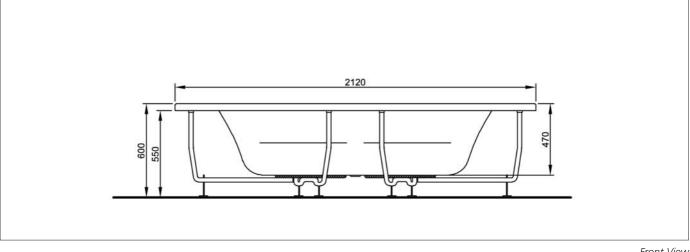



R

Detail A

Detail B


• As shown in Figure Plan, the wall hangers (details A-B) are used to fix the product to the wall. It is suggested to use the wall hangers to rigid the bathtub.

### **Points to Notice:**

- An elbow and a waste connection hose of 50 mm. will be delivered with the product but an edge lath and other accessories are not included.
- The place where the product will be installed should be straight.
- An airing and access window should be left if the hydromassage bathtub is installed without panels.
- The corner bathtubs should not be installed to an U-shaped place.
- During the installation of the panels, the adjustment of the leg set should be carried out according to the height of the panel.
- The electronical system is running with 220 volt (with earth connection). For its connection a 3x2,5 mm. cable should be used.
- The product should be protected with an appropriate ampere fuse (for Duo Maxi System 20 ampere, for Duo Soft System 16 ampere, for Aqua Maxi and Aqua Soft Systems 10 ampere) and the amper fuse should be closed when it is not used.
- The faucet applications should be from the points shown in the drawings below which are indicated with stickers on the product.
- The faucet should not be applied on the pump of the hydromassage bathtub.
- The spout should be min 17 cm. if the faucets are installed to the wall.
- Handgrip application for this product is not available.
- For the cleaning of the acrylic bathtub look at the User Manual.
- Waste connection fuse, wall hangers and user manual are delivered with the product.


## **Faucet Applications**

ANY APPLICATION OF TABS ON THIS BATHTUB IS NOT POSSIBLE.

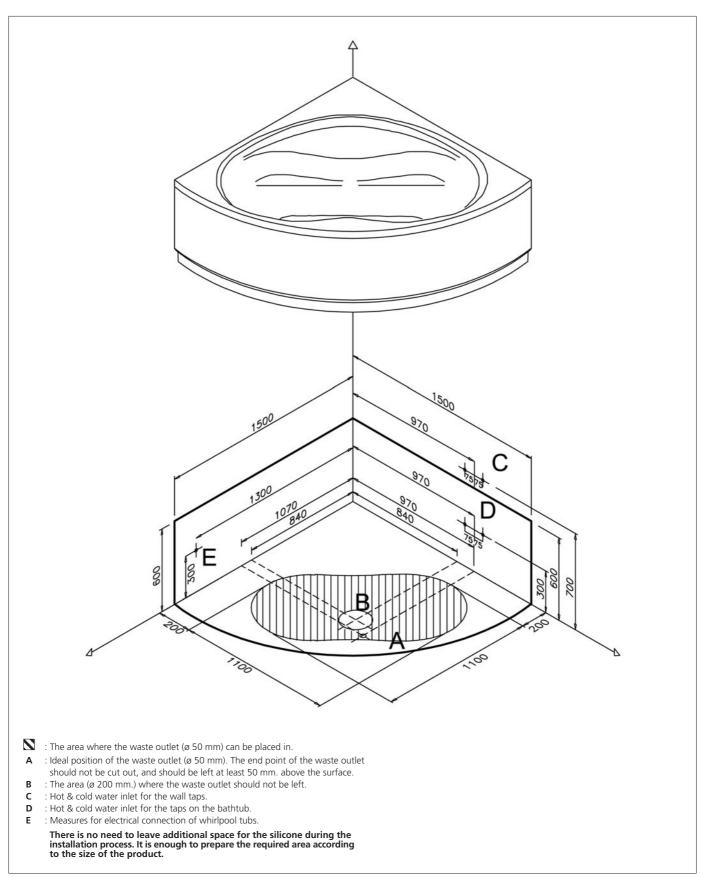


Perspective


# Massage Systems

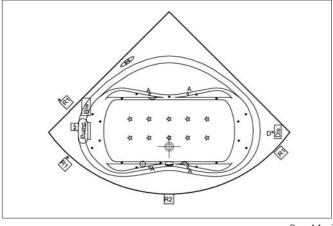

Duo Maxi

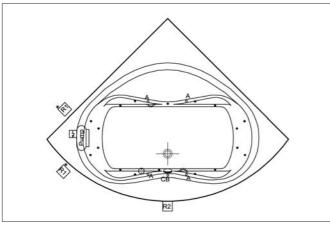

Aqua Maxi

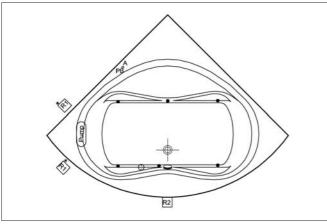


Aqua Soft Easy

If the bathtub is used without panels, the following airing and access windows should be applied:


- R1 Access window (min. 400x400 mm.)
- R1 Airing and access window (min. 400x400 mm.)

R2 Access window (min. 400x400 mm.)

R2 Airing and access window (min. 250x250 mm.)

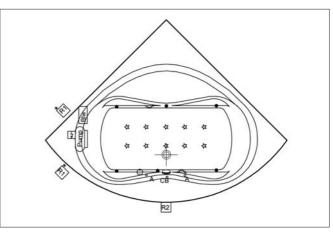

Duo Soft

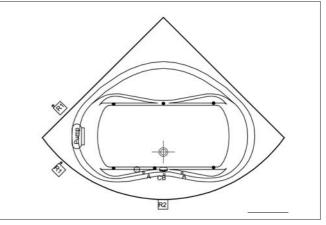

Aqua Soft

220

PHASE

#### **IMPORTANT!**

- For the electrical connection of the hydromassage bathtubs, earth connection is necessary.
- The cable connection of the hyrdomassage bathtubs should be applied as shown in the Figure. Check whether the yellow-green earth cables bound with the metal parts
  - YELLOW-GREET GROUND placed under the hydromassage bathtubs are connected to all legs.

| Pump | Pump                     |      |
|------|--------------------------|------|
|      | Electronic Control Panel | \$   |
| 2    | Transformer              | -    |
| Blw  | Blower                   | •    |
| ℃В   | Control Button           | •    |
| A°   | Air Controller           | يهنز |
| РВ   | Push Button              |      |
|      |                          |      |

| Air Jets             |
|----------------------|
| Waste                |
| Water Jets           |
| Micro Water Jets     |
| Underwater Light     |
| Water Suction Filter |
|                      |

VitrA Bathtubs Co.

VitrA Bathtubs Co. always keeps the rights to make any changes on the product. (October 2008)

Cumhuriyet Mah. 13. Sok. No: 10 Şekerpınar 41400 Gebze / Kocaeli / Turkey Tel: +90 (262) 648 95 00 (pbx) Fax: +90 (262) 658 85 94 E-mail: vitrabathtubs.export@eczacibasi.com.tr www.vitrakuvet.com.tr

